


SEALEY

Quality MACHINERY

Sole UK Distributor
Sealey Group,
Bury St. Edmunds,
Suffolk.

PARTS LISTING FOR:
TABLE SAW
MODEL NO: **HTS8**

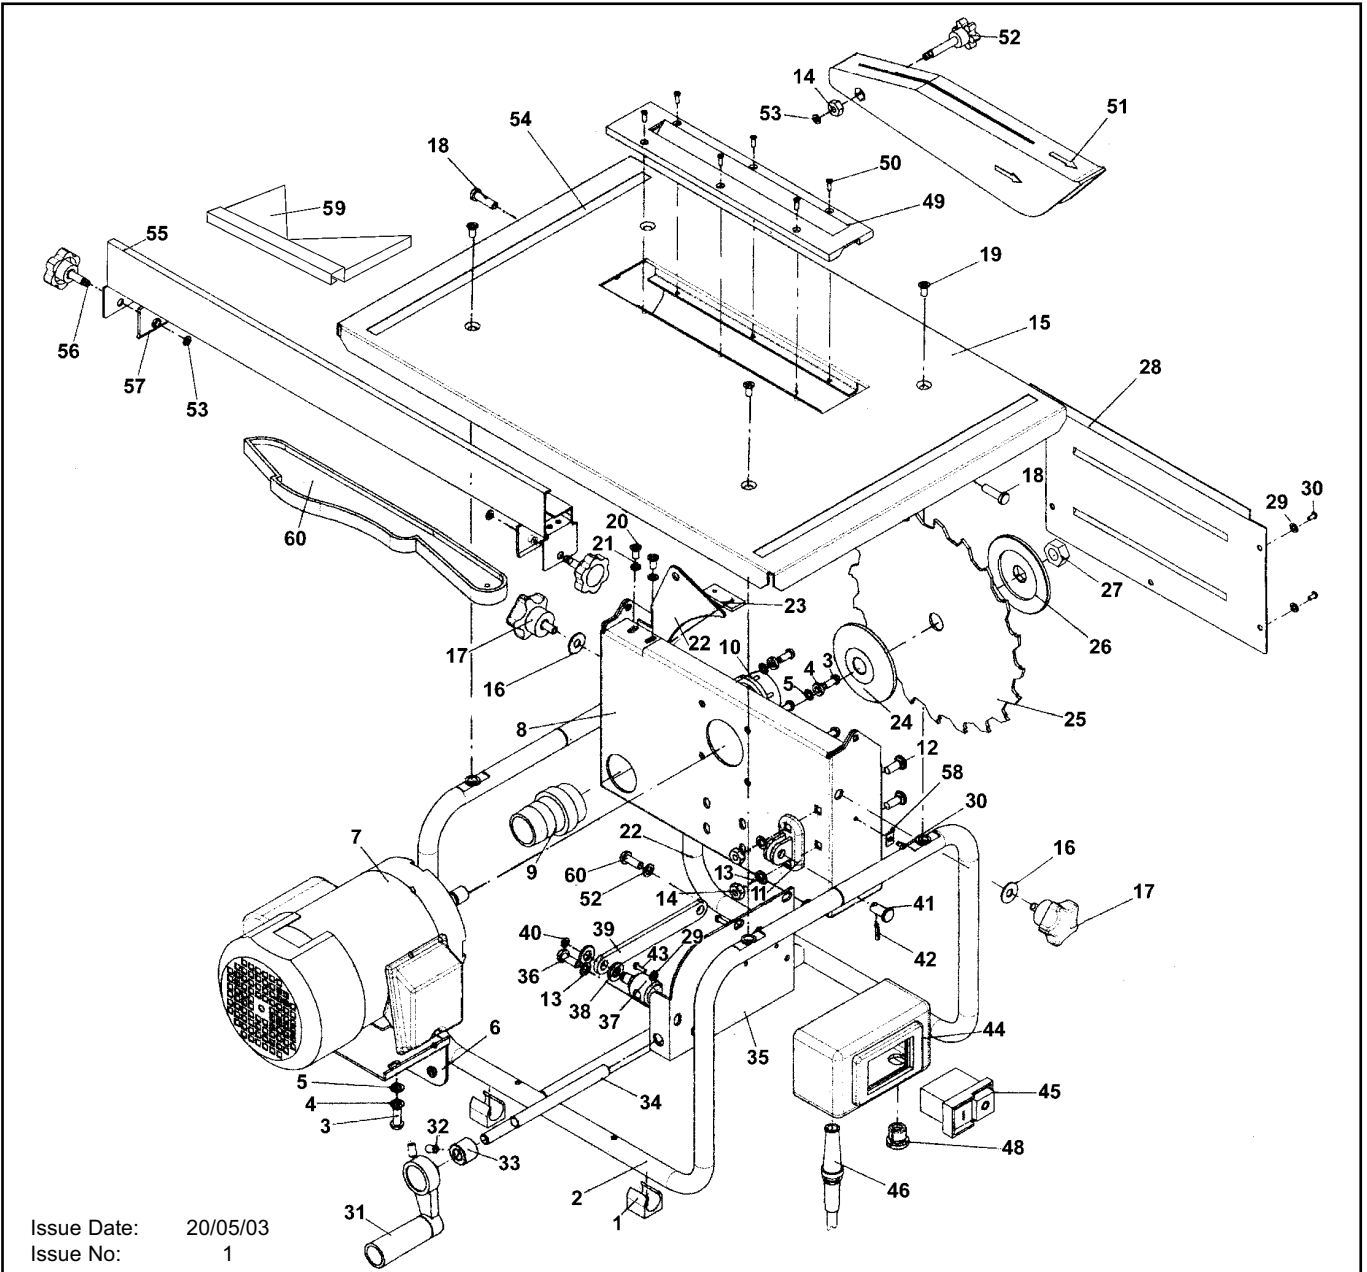

ITEM	PART NO	DESCRIPTION
01	HTS8.01	PAD
02	HTS8.02	MAIN FRAME
03	HTS8.03	SCREW
04	HTS8.04	SPRING WASHER
05	HTS8.05	WASHER
06	HTS8.06	MOTOR SUPPORT
07	HTS8.07	MOTOR
08	HTS8.08	BLADE HOUSING
09	HTS8.09	DUST EXTRACTOR
10	HTS8.10	EXTRACTION SEAT
11	HTS8.11	CONNECTING SEAT
12	HTS8.12	SQUARE HEAD BOLT
13	HTS8.13	WASHER
14	HTS8.14	NUT
15	HTS8.15	TABLE
16	HTS8.16	WASHER
17	HTS8.17	KNOB
18	HTS8.18	PIN ROD
19	HTS8.19	SCREW
20	HTS8.20	SCREW

ITEM	PART NO	DESCRIPTION
21	HTS8.21	STAR WASHER
22	HTS8.22	SPLITTER
23	HTS8.23	MOUNTING PLATE
24	HTS8.24	INNER FLANGE
25	HTS8.25	BLADE
26	HTS8.26	OUTER FLANGE
27	HTS8.27	TIGHTENING NUT
28	HTS8.28	SAFETY COVER
29	HTS8.29	WASHER
30	HTS8.30	SCREW
31	HTS8.31	HANDLE
32	HTS8.32	SQUARE HEAD BOLT
33	HTS8.33	SLEEVE
34	HTS8.34	LEAD SCREW
35	HTS8.35	SWITCH BASE
36	HTS8.36	SCREW
37	HTS8.37	SCREW NUT
38	HTS8.38	SPACER
39	HTS8.39	CONNECTING ROD
40	HTS8.40	WASHER

ITEM	PART NO	DESCRIPTION
41	HTS8.41	PIN ROD
42	HTS8.42	SPRING PIN
43	HTS8.43	SCREW
44	HTS8.44	SWITCH HOUSING
45	HTS8.45	SWITCH
46	HTS8.46	CABLE SLEEVE
48	HTS8.48	CABLE CLAMP
49	HTS8.49	TABLE INSERT
50	HTS8.50	SCREW
51	HTS8.51	BLADE GUARD
52	HTS8.52	KNOB SCREW
53	HTS8.53	SPRING WASHER
54	HTS8.54	SCALE
55	HTS8.55	PARALLEL GUIDE
56	HTS8.56	TIGHTENING KNOB
57	HTS8.57	TIGHTENING PLATE
58	HTS8.58	POINTER
59	HTS8.59	SLIDING GUIDE
60	HTS8.60	PUSH-STICK

SEALEY

Quality MACHINERY

Sole UK Distributor
Sealey Group,
Bury St. Edmunds, Suffolk.

01284 757500
01284 703534

www.sealey.co.uk
sales@sealey.co.uk