



Item	Part No.	Description
1	SM2254.01	Base
2	SM2254.02	Scale
3	SM2254.03	Support
4	SM2254.04	Screw
5	SM2254.05	Plate
6	SM2254.06	Complete stop bar # 6+7+8
9	SM2254.09	Complete coolant tank #9+11
10	SM2254.10	Screw
12	SM2254.12	Coolant tap
13	SM2254.13	Coolant tube
14	SM2254.14	Plate
15	SM2254.15	Plate
16	SM2254.16	Block
17	SM2254.17	Shaft
18	SM2254.18	Screw
19	SM2254.19	Screw
20	SM2254.20	Set screw
21	SM2254.21	Lead screw
22	SM2254.22	Pin
23	SM2254.23	Support
24	SM2254.24	Screw
25	SM2254.25	Plate
26	SM2254.26	Screw
27	SM2254.27	Screw
28	SM2254.28	Plate
29	SM2254.29	Vice
30	SM2254.30	Vice jaw
31	SM2254.31	Vice jaw
32	SM2254.32	Vice jaw
33	SM2254.33	Vice jaw
34	SM2254.34	Vice
35	SM2254.35	Screw
36	SM2254.36	Nut M16
37	SM2254.37	Handle body
38	SM2254.38	Handle

Item	Part No.	Description	Item	Part No.	Description
39	SM2254.39	KEY	59	SM2254.59	Nut M16
40	SM2254.40	Tie rod support + #44	60	SM2254.60	Motor head
41	SM2254.41	E-ring	61	SM2254.61	Plug
42	SM2254.42	Tie rod support pin	62	SM2254.62	Spring screw
45	SM2254.45	Mobile guard +#47 + #50	63	SM2254.63	Spring
46	SM2254.46	C-ring	64	SM2254.64	Set screw
47	SM2254.47	Screw	65	SM2254.65	Worm gear
48	SM2254.48	Screw	66	SM2254.66	Oil lever - drain plug
49	SM2254.49	Coolant tube	67	SM2254.67	Bearing
51	SM2254.51	Screw	68	SM2254.68	Nut
52	SM2254.52	Blade shaft flange	69	SM2254.69	Worm gear
53	SM2254.53	Stake	70	SM2254.70	Head gasket
55	SM2254.55	Blade shaft	71+72	SM2254.71+72	Switch box # 71+72
56	SM2254.56	Bearing	73	SM2254.73	Motor
57	SM2254.57	Head lever handgrip	74	SM2254.74	Bearing 609
58	SM2254.58	Head lever	75	SM2254.75	Ring
			76	SM2254.76	Pump connection box
			77	SM2254.77	Screw M5
			78	SM2254.78	Coolant pump
			79	SM2254.79	Screw M5